



Grandstream Networks, Inc.

Connecting GDS3710 with GXV3370

Configuration Guide



Table of Contents

INTRODUCTION	3
PEERING SCENARIO	4
Settings Configuration on the GDS3710 Side	4
Settings Configuration on the GXV3370 Side	6
CONNECTION USING SIP SERVER	8
Settings Configuration on the GDS3710 Side	8
<i>White List Settings</i>	10
Settings Configuration on the GXV3370 Side	10

Table of Figures

Figure 1: GXV3370 peered with the GDS3710.....	4
Figure 2: Door System Settings	5
Figure 3: Enable Direct IP Call.....	6
Figure 4: GXV3370 General Settings	6
Figure 5: GXV3370 SIP Settings.....	7
Figure 6: GXV3370 Connected to GDS3710 through UCM6XXX	8
Figure 7: SIP Basic Settings	9
Figure 8: Door System Settings	9
Figure 9: White List	10
Figure 10: General Settings	10
Figure 11: GDS Settings	11
Figure 12: Open Door from GVX3370	11



INTRODUCTION

GDS3710 HD IP Video Door System is a hemispheric IP video door phone and a high-definition IP surveillance. GDS3710 is ideal for monitoring from wall to wall without blind spots. Powered by an advanced Image Sensor Processor (ISP) and state of the art image algorithms, it delivers exceptional performance in all lighting conditions. It contains integrated PoE, LEDs, HD loudspeaker, RFID card reader, motion detector, lighting control switch, Alarm Input/output and more.

The GDS3710 IP video door system features industry-leading SIP/VoIP for 2-way audio and video streaming to smart phones and SIP phones, allowing to receive calls from GDS3710 on associated SIP phones when doorbell is pressed, opening door from the SIP phone, initiate calls from the phone to GDS3710 and get real time audio/video stream.

The GDS3710 can be connected with a SIP phone in 2 different ways, either using peering mode (without a SIP server) or through a SIP server.

This guide describes needed configuration for both peering and using SIP server scenarios. In this guide, GXV3370 will be used as SIP phone and UCM6XXX as SIP server.



PEERING SCENARIO

We assume that the GDS3710 is installed on a small warehouse at front door and GXV3370 inside to monitor and control the access of the premise. Employees can swipe the RFID card to get in, while visitors need to press the Door Bell to initial video call and the related person at the GXV3370 side need to type the key PIN to open the door remotely to allow the visitors to get in as shown in the figure below.

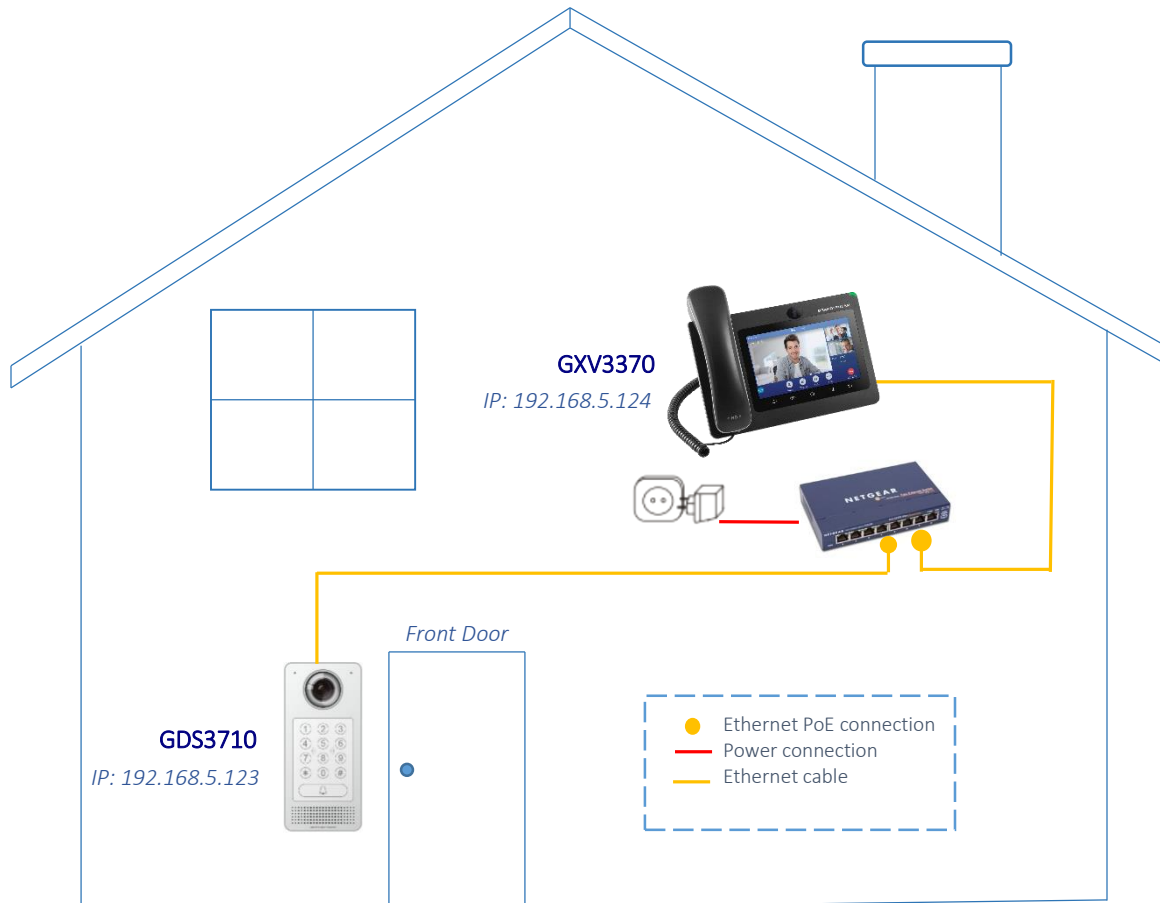


Figure 1: GXV3370 peered with the GDS3710

- The IP address used by the GDS3710 is 192.168.5.123.
- The IP address used by the GXV3370 is 192.168.5.124.

Settings Configuration on the GDS3710 Side

The GDS3710 needs to be configured with the IP address of the GXV3370 and related SIP port, and remote PIN for door opening. (the second account will be used on the GXV3370 for this example, when using third or fourth... accounts, the port number associated to each port is needed 5064,5066...).

Access the GDS3710 Web GUI and navigate to **“Door System Settings → Basic Settings”** then set the following as shown on the figure below:



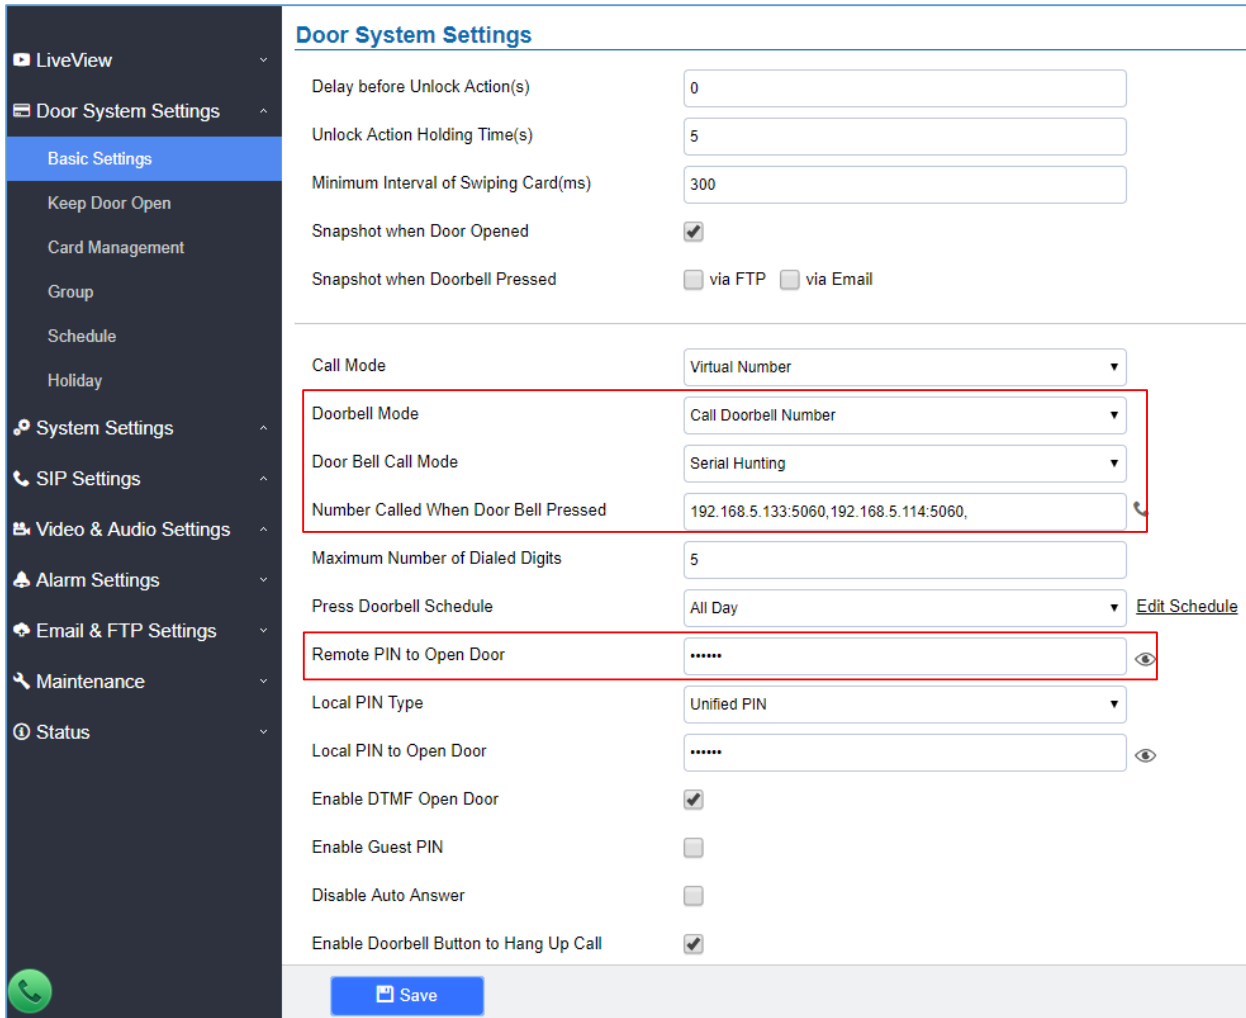


Figure 2: Door System Settings

- Choose the action to be taken when the doorbell is pressed, three options are available:
 - **Call Doorbell Number:** when Doorbell is pressed, a call will be made to the “Number Called When Door Bell Pressed”
 - **Control Doorbell Output (Digital Output 1):** when Door Bell is pressed electronic lock for Output 1 is opened.
 - **Both Of Above:** When selected, both Call Doorbell Number and Control Doorbell Output options are enabled.
 In our case we will choose “**Call Doorbell Number**”.
- The option “Door Bell Call Mode” can be used when multiple phones are configured to be called when pressing the doorbell button. Users can set this option to:
 - **Serial Hunting:** The configured extensions and/or IP addresses will ring one after one by order.
 - **Parallel Hunting:** The configured extensions and/or IP addresses will ring simultaneously (up to 4 simultaneous SIP calls).
- Enter the IP address and port number of the GXV3370 under “Number Called When Door Bell Pressed”.



4. Enter the “Remote PIN to Open the Door” in order to open the door by sending a SIP message from the phone while in active call with the GDS3710.

5. Click  in order to apply changes.

Make sure that the Direct IP Call feature is active from the GDS3710 Web GUI under “**SIP Settings → SIP Advanced Settings**” then click on “**Enable Direct IP Call**”.






Enable DTMF	<input checked="" type="checkbox"/> RFC2833	<input type="checkbox"/> SIP INFO
Enable Keep Alive	<input type="checkbox"/>	
Enable Direct IP Call	<input checked="" type="checkbox"/>	
Enable two-way SIP Calling	<input type="checkbox"/>	
SIP Proxy Compatibility Mode	<input type="checkbox"/>	
Unregister On Reboot	<input checked="" type="checkbox"/>	

Figure 3: Enable Direct IP Call

Settings Configuration on the GXV3370 Side

 The GXV3370 related Account need to be set as “Active”, and correct “Local SIP Port” need to be configured at the GDS3710 side. These are the basic settings to make the peering scenario work.

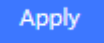1. On the GXV3370 web GUI navigate under “**Account → General Settings**” and set “**Account Active**” to **Yes**, then click on  and  in order to apply new changes.

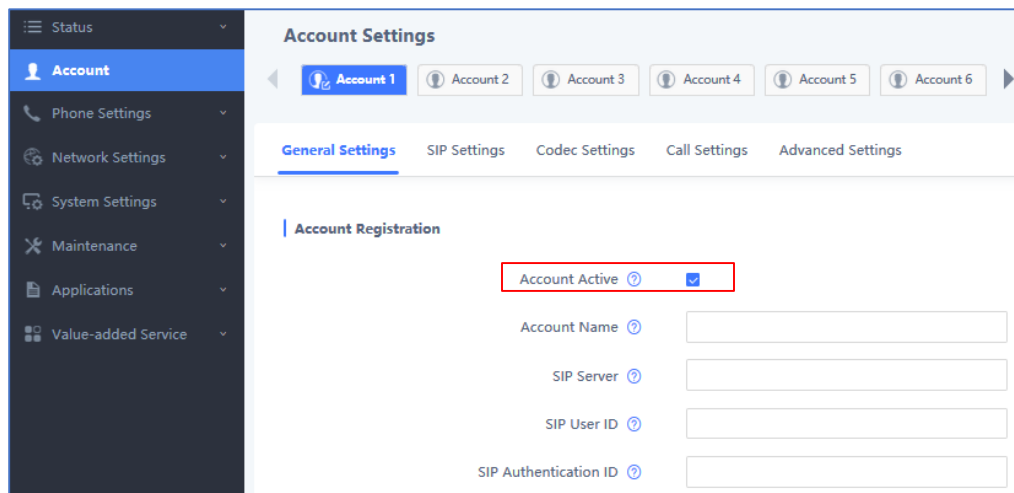

Account Settings

Account 1 | Account 2 | Account 3 | Account 4 | Account 5 | Account 6

General Settings | SIP Settings | Codec Settings | Call Settings | Advanced Settings

Account Registration

Account Active

Account Name

SIP Server

SIP User ID

SIP Authentication ID

Figure 4: GXV3370 General Settings

2. Navigate to “**Account → SIP Settings**” and verify that the “**Local SIP Port**” set on the GXV3370 side is the same as the one on the GDS3710.



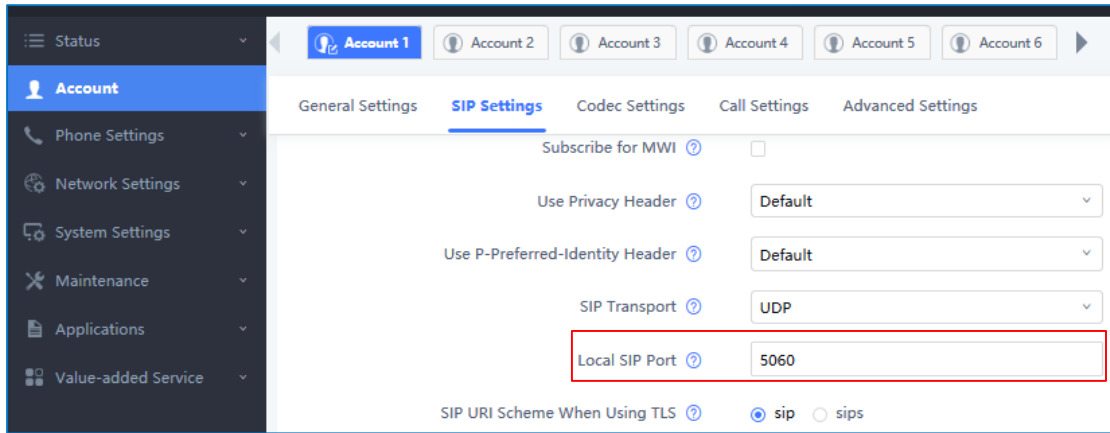


Figure 5: GXV3370 SIP Settings



CONNECTION USING SIP SERVER

In case of multiple GDS3710 and GXV3370 are available, a SIP server needs to be set in order to communicate between different devices.

Note: We recommend using Stateless SIP server in this type of installations, Stateful SIP servers may not work.

The following shows a sample setup.

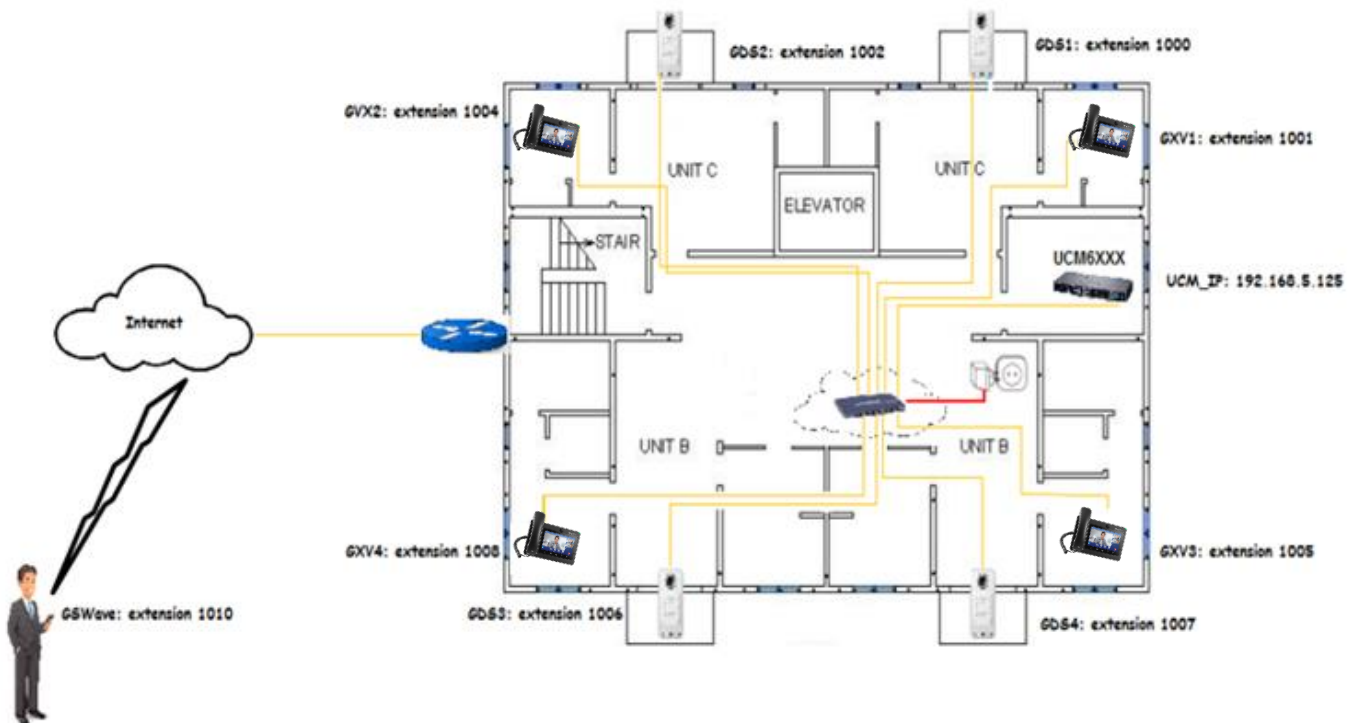



Figure 6: GXV3370 Connected to GDS3710 through UCM6XXX

Settings Configuration on the GDS3710 Side

A SIP account needs to be registered on the GDS3710 to interact with other devices.

This can be done by entering the GDS3710 WebGUI under “**SIP Settings → SIP Basic Settings**”, then type the SIP account related information and click on **Save**.



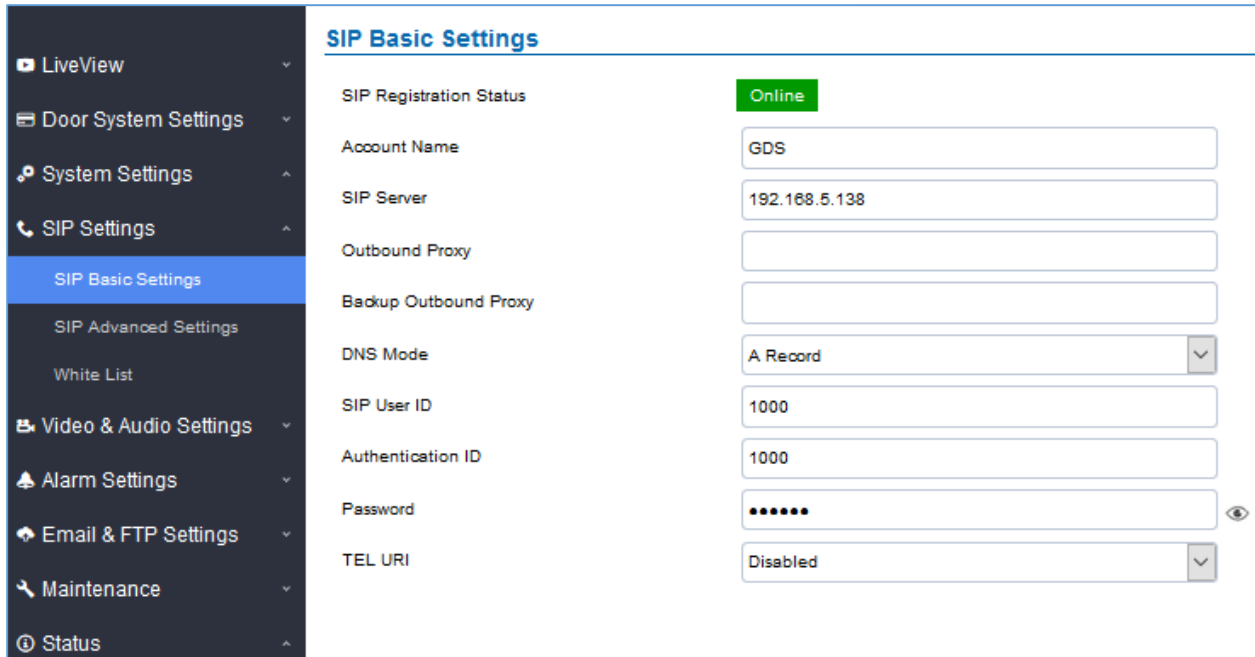

The screenshot shows the 'SIP Basic Settings' page. On the left is a dark sidebar menu with options: LiveView, Door System Settings, System Settings, SIP Settings (expanded), SIP Basic Settings (highlighted), SIP Advanced Settings, White List, Video & Audio Settings, Alarm Settings, Email & FTP Settings, Maintenance, and Status. The main content area is titled 'SIP Basic Settings' and contains the following fields:


SIP Registration Status	Online
Account Name	GDS
SIP Server	192.168.5.138
Outbound Proxy	
Backup Outbound Proxy	
DNS Mode	A Record
SIP User ID	1000
Authentication ID	1000
Password
TEL URI	Disabled

Figure 7: SIP Basic Settings

Go to “Door System Settings → Basic Settings” then set the following:

1. Doorbell Mode set to “Call Doorbell Number”.
2. Number Called When Door Bell Pressed (assuming 1001 is the GXV3370 number).
3. Remote PIN to Open the Door.

The following figure shows an example of the configuration done.

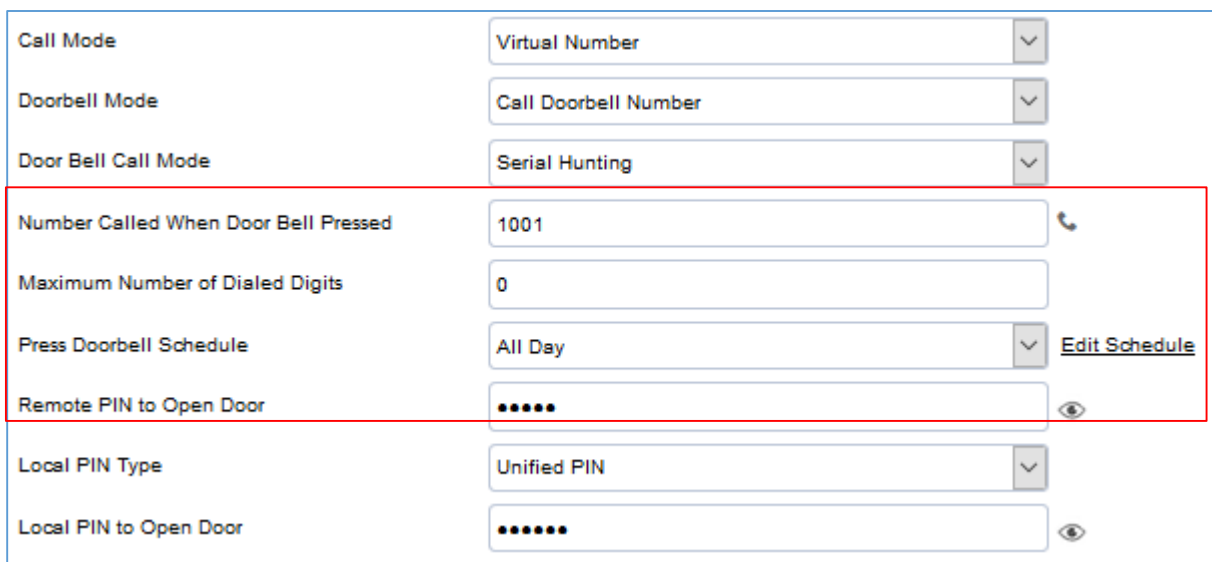

The screenshot shows the 'Door System Settings' page. The following fields are highlighted with a red box:

Call Mode	Virtual Number
Doorbell Mode	Call Doorbell Number
Door Bell Call Mode	Serial Hunting
Number Called When Door Bell Pressed	1001
Maximum Number of Dialed Digits	0
Press Doorbell Schedule	All Day
Remote PIN to Open Door

 
Other visible fields include Local PIN Type (Unified PIN) and Local PIN to Open Door (.....).

Figure 8: Door System Settings



White List Settings

Any number calling the GDS3710 extension will have its call auto answered. To restrict allowed numbers to call the GDS3710, user needs to navigate under “**SIP Settings → White List**”.

1. Check **Enable White Number List**.
2. Click on **Add** to add numbers allowed to dial the GDS3710.
3. Click  to apply the settings.

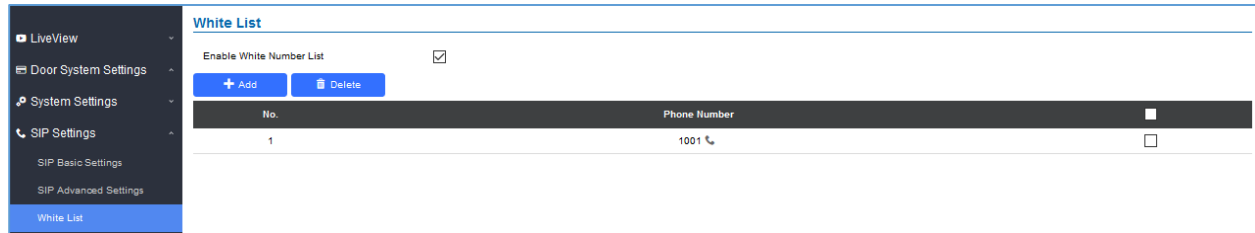
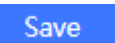
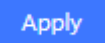


Figure 9: White List

The example above shows that only phone number 1001 is allowed to call the GDS3710.

Settings Configuration on the GXV3370 Side

A SIP account needs to be registered on the GXV3370 side as well to interact with other devices available on the local network.

This can be done by entering the GXV3370 Web GUI under “**Account → General Settings**”, then type the SIP account related information and click on  and  to apply new changes.

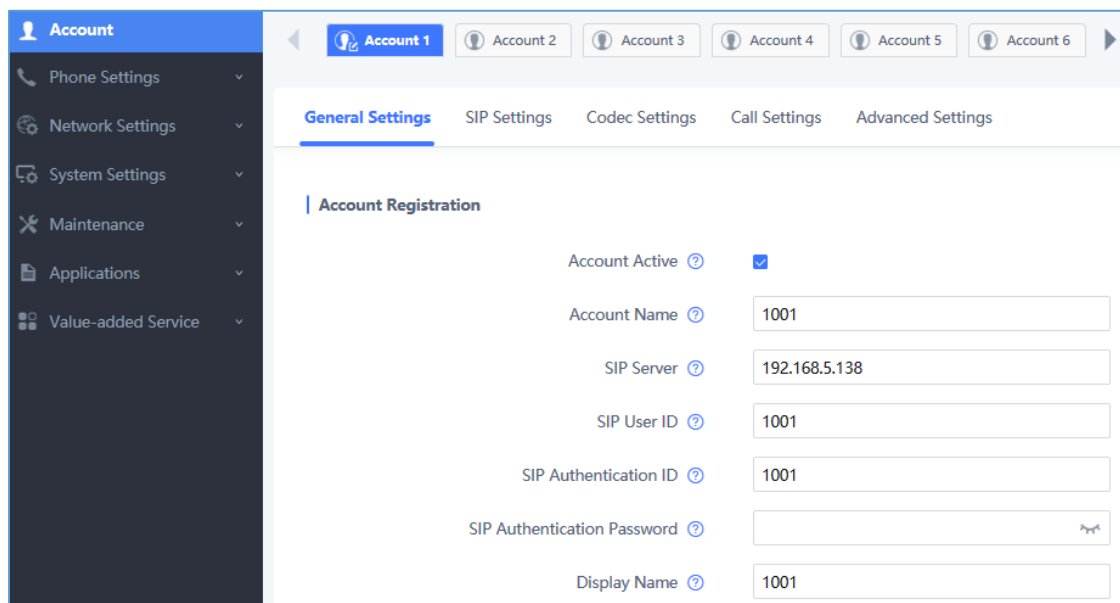


Figure 10: General Settings

Users could configure “Remote PIN to Open the Door” on the GXV3370 Web GUI to open the door with a single click.



This can be done from the GXV3370 web UI → **Value-added Service** and set the following:

1. Click on **Add** button (The GXV3370 supports up to 10 GDS3710 devices).
2. Set Service Type to “Door System”.
3. Set “Door System Type” to “GDS”.
4. Enter the “Display Name”, it can be any name to identify the GDS3710, in our case it’s “open”.
5. Enter the “System Number”, it can be the IP address or the Extension of the remote GDS3710.
6. Enter the “Access Password” which is the password set on “Remote PIN to Open the Door” on the GDS3710.

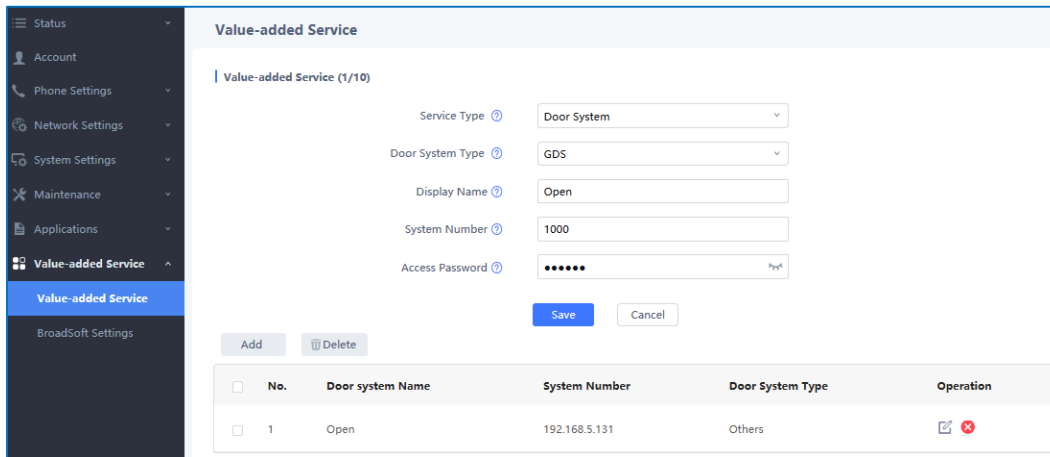


Figure 11: GDS Settings

Once the user presses the ring button on the GDS3710, an INVITE will be sent to the GXV phone, the GDS3710 stream will be played on the GVX phone and a button will appear on the left side panel named “open” which is the “GDS Name”. If users press the “open” button, SIP MESSAGE will be sent to the GDS3710 in order to open the door as shown below.

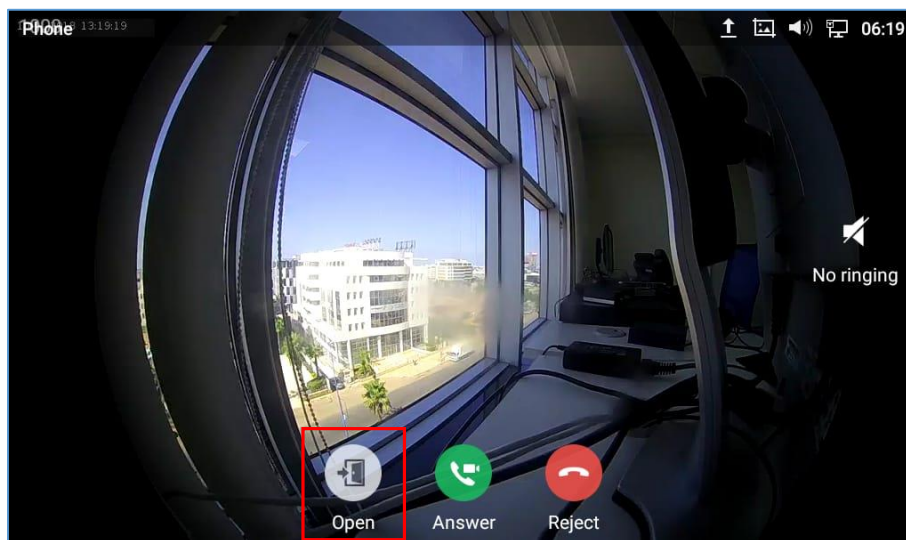


Figure 12: Open Door from GVX3370

